


A corner form from above with the barbed wire reinforcing ready to be tamped. Notice how they are laid in two directions.

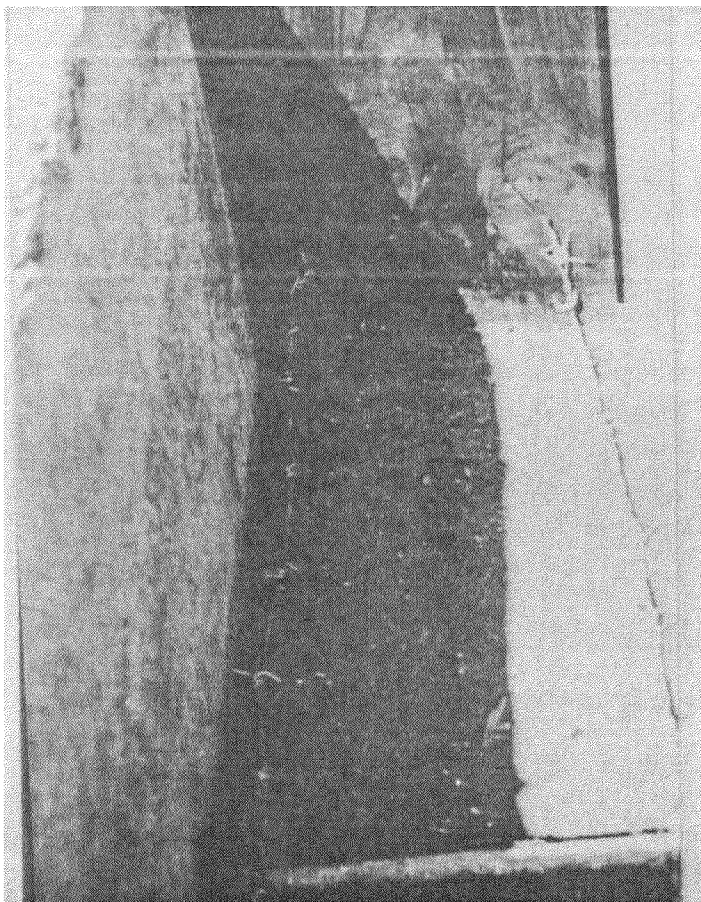

A view from above of the door frame at top held to the earth wall with barbed wire that is 'nailed' to the wood of the frame.